

ADA037212

Asynchronous Serial Interface for  
Connecting a PDP-11 to the  
ARPANET (BBN 1822)

by

Ronald C. Crane

July 1976

Technical Report No. 116

The views and conclusions contained in this document are those of the author and should not be interpreted as necessarily representing the official policies, either express or implied, of the Defense Advanced Research Projects Agency or the United States Government.

This research was supported by the Defense Advanced Research Projects Agency under ARPA Order No. 2494, Contract No. MDA903-76C-0093.




COPY AVAILABLE TO THE PUBLIC  
PERMIT FULL REPRODUCTION

DIGITAL SYSTEMS LABORATORY  
STANFORD ELECTRONICS LABORATORIES

STANFORD UNIVERSITY • STANFORD, CALIFORNIA



# **DISCLAIMER NOTICE**

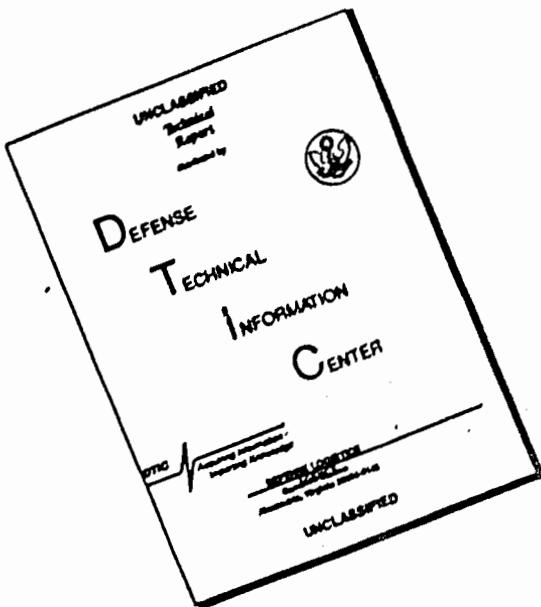

**THIS DOCUMENT IS BEST  
QUALITY AVAILABLE. THE COPY  
FURNISHED TO DTIC CONTAINED  
A SIGNIFICANT NUMBER OF  
PAGES WHICH DO NOT  
REPRODUCE LEGIBLY.**

UNCLASSIFIED

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

REPORT DOCUMENTATION PAGE			READ INSTRUCTIONS BEFORE COMPLETING FORM	
1. REPORT NUMBER TR #116	2. GOVT ACCESSION NO.	3. RECIPIENT'S CATALOG NUMBER		
4. TITLE (and Subtitle)  Asynchronous Serial Interface for Connecting a PDP-11 to the ARPANET (BBN 1822)		5. TYPE OF REPORT & PERIOD COVERED  Technical Report, July 1976		
6. PERFORMING ORG. REPORT NUMBER				
7. AUTHOR(S) Ronald C. Crane		8. CONTRACT OR GRANT NUMBER(S) MDA903-76C-0093, ARPA Order No - 2494		
9. PERFORMING ORGANIZATION NAME AND ADDRESS Stanford Electronics Laboratories Stanford University Stanford, CA 94305		10. PROGRAM ELEMENT, PROJECT, TASK AREA & WORK UNIT NUMBERS 6T10		
11. CONTROLLING OFFICE NAME AND ADDRESS Defense Advanced Research Projects Agency Information Processing Techniques Office 1400 Wilson Ave., Arlington, VA 22209		12. REPORT DATE July 1976		
13. MONITORING AGENCY NAME & ADDRESS (if diff. from Controlling Office) Mr. Philip Surra, Resident Representative Office of Naval Research Durand 165, Stanford University		14. NO. OF PAGES 49		
15. SECURITY CLASS. (of this report) UNCLASSIFIED		16. DECLASSIFICATION/DOWNGRADING SCHEDULE		
17. DISTRIBUTION STATEMENT (of this report) Reproduction in whole or in part is permitted for any purpose of the U. S. Government  12/114p. 14/ TR-116		18. DISTRIBUTION STATEMENT (of the abstract entered in Block 20, if different from report)		
19. SUPPLEMENTARY NOTES				
20. KEY WORDS (Continue on reverse side if necessary and identify by block number) BBN 1822 INTERFACE, HOST-IMP INTERFACE, LSI-11, PDP-11, DRV-11, DR11-C, PACKET-RADIO-HOST INTERFACE, ASYNCHRONOUS SERIAL INTERFACE, ARPANET				
21. ABSTRACT (Continue on reverse side if necessary and identify by block number) This report describes an interface to permit the connection of any PDP-11 to either the Packet radio network or the ARPAnet. The interface connects to an IMP on one side, meeting the specifications published in BBN report number 1822, and to a 16 bit parallel interface (DRV-11 or DR11-C) as described in the DEC peripherals and interfacing handbook. The interface card itself is a double height board (5.2"x8.5") which can be plugged into any peripheral slot in a PDP-11 backplane. The interface card is connected to the parallel interface card via two cables with Berg 40 pin connectors (DEC H-856) and to the IMP via				


UNCLASSIFIED

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

19 KEY WORDS (Continued)

20 ABSTRACT (Continued)

an Amphenol bayonet connector (48-10R-18-31S). All 3 cables and connectors are supplied with the I/O interface card. The parallel interface card (DEC DR11-C or DRV-11) together with the special I/O interface card described in this report comprise the 1822 interface. The report includes description of the operation of circuits, programming, and diagnostics for the 1822 interface.

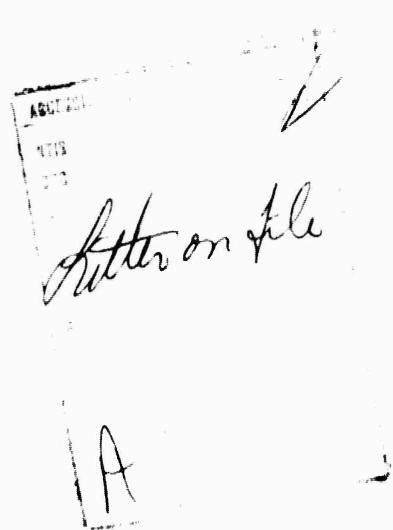

DD FORM 1473 (BACK)  
1 JAN 73

EDITION OF 1 NOV 65 IS OBSOLETE

UNCLASSIFIED

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

Asynchronous Serial Interface  
for Connecting a  
PDP-11 to the ARPANET (BBN 1822)

Technical Report No. 116

July 1976

Ronald C. Crane  
Digital Systems Laboratory  
Departments of Electrical Engineering and Computer Science  
Stanford University  
Stanford, California

ABSTRACT

This report describes an interface to permit the connection of any PDP-11 to either the Packet radio network or the ARPAnet. The interface connects to an IMP on one side, meeting the specifications published in BBN report number 1822, and to a 16 bit parallel interface (DRV-11 or DR11-C) as described in the DEC peripherals and interfacing handbook. The interface card itself is a double height board (5.2" x 8.5") which can be plugged into any peripheral slot in a PDP-11 backplane. The interface card is connected to the parallel interface card via two cables with Berg 40 pin connectors (DEC H-856) and to the IMP via an Amphenol bayonet connector (48-10R-18-31S). All 3 cables and connectors are supplied with the I/O interface card. The parallel interface card (DEC DR11-C or DRV-11) together with the special I/O interface card described in this report comprise the 1822 interface. The report includes descriptions of the operation of circuits, programming, and diagnostics for the 1822 interface.

KEY WORDS

BBN 1822 INTERFACE, HOST-IMP INTERFACE, LSI-11, PDP-11, DRV-11, DR11-C  
PACKET-RADIO-HOST INTERFACE, ASYNCHRONOUS SERIAL INTERFACE, ARPANET

The views and conclusions contained in this document are those of the author and should not be interpreted as necessarily representing the official policies, either express or implied, of the Defense Advanced Research Projects Agency or the United States Government.

This research was supported by the Defense Advanced Research Projects Agency under ARPA Order No. 2494, Contract No. MDA903-76C-0093

## Table of Contents

Section	Contents	Page
1.0	Introduction	3
	1.1    Block Diagram	3
2.0	Transmit Section	5
	2.1    Host Power Relay	5
	2.2    Data Section	5
	2.2.1    Data Path	
	2.2.2    Handshaking Procedure	
	2.2.3    Last Host Data Bit Signal	
	2.2.4    Transmit Enable	
	2.2.5    Initialize Pulse	
	2.2.6    Load Pulse	
	2.2.7    Interrupt Request	
3.0	Receive Section	10
	3.1    IMP Power Sensing	10
	3.2    Data Section	10
	3.2.1    Interrupt Request	
	3.2.2    Initialize & Read Pulses	
	3.2.3    Bit 15 Output	
	3.2.4    Data	
	3.2.5    Bit Count	
	3.2.6    Receiver Timing	
4.0	Electrical Specifications	16
	4.1    Line Drivers and Receivers	
	4.2    Power Distribution on Board	
5.0	Changing Time Delays	19
6.0	Connectors	20
	6.1    Loopback Test Connector	21
7.0	Programming	23
	7.1    Status Register	23
	7.2    Input and Output Buffers	23

7.3	Transmit Register	24
	7.3.1    Data Section	
	7.3.2    Control Section	
7.4	Receive Register	25
	7.4.1    Data	
	7.4.2    Control	
7.5	Reference Tables	26
8.0	Diagnostics	29
8.1	Packet Source/Sink Program	29
	8.1.1    Description of Program	
	8.1.2    Running Source/Sink Program	
	8.1.3    Source/Sink Program Listing	
8.2	Scope Loop	32
	8.2.1    Running Scope Program	
	8.2.2    Using Scope Loop	
Appendix		34
A	DR11-C Specifications	35
B	Parts list for Interface	40

This report describes an interface to permit the connection of any PDP-11 to either the Packet radio network or the ARPAnet. The interface connects to an IMP on one side, meeting the specifications published in BBN report number 1822, and to a 16 bit parallel interface (DRV-11 or DR11-C) as described in the DEC peripherals and interfacing handbook. The interface card itself is a double height board (5.2"x8.5") which can be plugged into any peripheral slot in a PDP-11 backplane. The interface card is connected to the parallel interface card via two cables with Berg 40 pin connectors (DEC H-856) and to the IMP via an Amphenol bayonet connector (48-10R-18-31S). All 3 cables and connectors are supplied with the I/O interface card. The parallel interface card (DEC DR11-C or DRV-11) together with the special I/O interface card described in this report comprise the 1822 interface.

Except for differences in handling the IMP power relay status, this interface reflects the current prototype as constructed by SRI. In the SRI unit, an interrupt is continuously generated when the IMP goes down. The interrupt generation can be stopped by disabling the receiver, after which it is necessary to poll the interface to see if the IMP comes back up. The interface described here generates one interrupt on each change of state of the IMP.

The following sections describe the operation of circuits, programming, and diagnostics for the 1822 interface.

## 1.1

### Block Diagram

The block diagram shows the basic parts of the special I/O interface card and its connections to the parallel interface card and the IMP.

The parallel interface card performs interrupt control on the PDP-11 unibus. It has 3 addresses on the Unibus; the control and status register, the output register, and the input gate. The status register includes both the interrupt enable bits as well as the transmit and receive enable bits. The output register is a buffer whose contents change only when the interface is loaded (written into). The input gate does not contain a buffer. Its function is only to gate its input signal to the Unibus. Thus the data sections of the I/O card need only store data for the receiver, but not the transmitter. A block diagram and description of the parallel interface unit supplied by DEC are in the appendix.

In the following section, the reader is referred to the block diagram as well as the circuit and timing diagrams that follow.

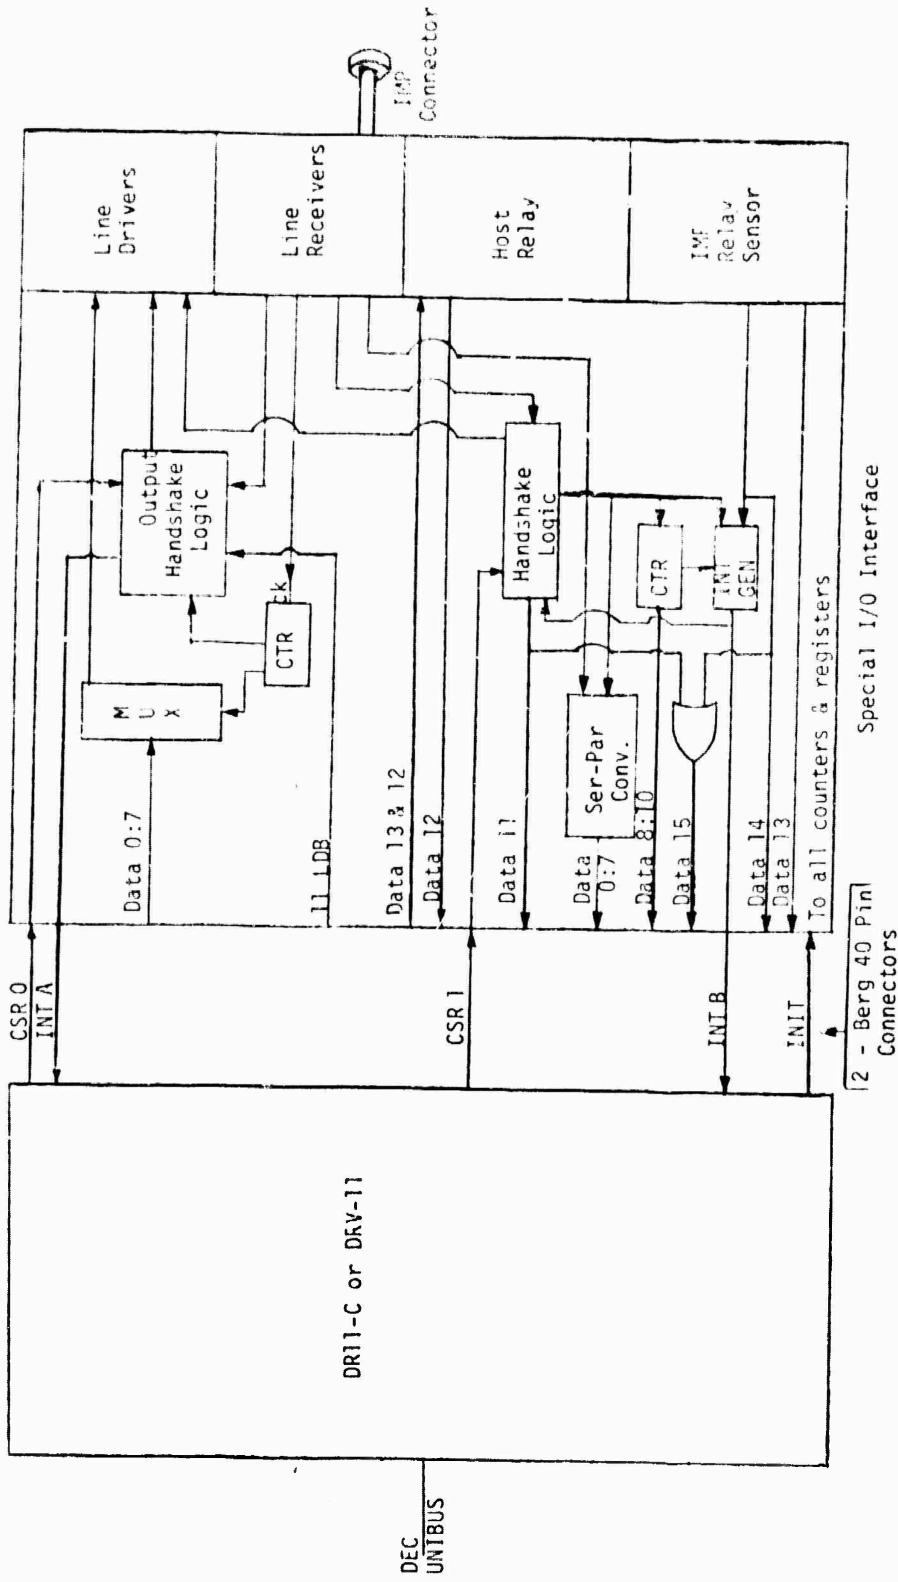


Figure 1  
FUNCTIONAL BLOCK DIAGRAM

The transmitter has two independent sections. One is the power relay and the other is the data section.

### 2.1 Host Power Relay

Bits 12 and 13 in the output register control the host power relay contacts. They are the R and S inputs to an R-S flip flop. Setting bit 12 closes the contacts, and setting bit 13 opens the contacts. If both bits are on, the contacts will be closed. If both bits are simultaneously cleared after both being set, the resulting contact position is indeterminate.

<u>Last State</u>		<u>New State</u>	<u>Contact Status</u>
Bit	Bit	Bit	
13	12	13	12
( any )		0	0
( any )		0	1
( any )		1	0
( any )		1	1
1	1	0	0
Initialize Pulse		Contacts open	

Bits 12 and 13 need to be set only once, as can be seen from the table, since the state of the relay remains at its previous setting when bits 12 and 13 are both zero.

Since the transmit register cannot be used to read out the state of the relay, bit 13 of the receive register is used for that purpose. Bit 13 is a 1 if the contacts are open, and 0 if they are closed.

Bit 13 of INBUF	Contact position
0	CLOSED (Host power on)
1	OPEN (Host power off)

The relay used is a Magnecraft W107-DIP-I reed relay. Magnecraft claims the contact bounce is less than 500 microseconds. Therefore to be safe, no data should be transmitted until 1 millisecond after the relay is closed. This means that bit 12 of the transmit register ( OUTBUF ) must be set before transmit enable is set to prevent the interface from transmitting a byte when the power bit is set.

### 2.2 Data Section

The data section of the transmitter is an 8 bit parallel to serial converter implemented with a multiplexer. The 8 bit data byte and control information are supplied by the DR11-C whose output buffer holds these values until they are replaced by new data and control information.

### 2.2.1 Data Path

The actual parallel to serial conversion is done by an 8 line multiplexer (74152), which selects bits 7 to 0 of the output buffer and directly feeds the output driver. The bit selection is done by the low order 3 bits of a 4 bit binary counter (74193). The counter starts at zero and is advanced one count each time the RFNHB (Ready for Next Host Bit) line makes a high to low transition. On the 8th count the high order bit becomes a 1 and is used to inhibit further counting and also to generate a transmit interrupt request.

### 2.2.2 Handshaking Procedure

When the RFNHB line goes high, and transmit enable is a 1 (enabled), the TYHB (There's Your Host Bit) line goes high indicating availability of a data bit. RFNHB eventually goes low indicating acceptance of data. This triggers the 74123 pulse generator generating a pulse T4 seconds long (nominally 1 microsecond). The leading edge of the pulse advances the counter. The TYHB line is held low for at least the duration of the pulse, and possibly longer if the RFNHB line remains low for longer than the pulse duration. Using the pulse generator provides a straightforward method of meeting the minimum pulse width requirements for the 2-Way handshake. This is useful when operating over long cables. For systems using only a 4-Way handshake, a simple time delay would suffice as long as it is long enough to allow the counter and multiplexer to settle after being advanced (See transmit timing diagram for details).

### 2.2.3 Last Host Data Bit (LHDB) Signal

The LHDB signal is asserted if the Last Byte signal is present (bit 11 in OUTBUF is a 1) and the counter is selecting the last bit of the byte to be transmitted. The timing for this signal coincides with the timing for the data signal.

### 2.2.4 Transmit Enable

The transmit enable signal is used to gate out the interrupt request signal as well as to hold off data transmission while it is low. When the transmit enable signal is returned to the "1" (enabled) state, the transmitter waits for new data to be loaded into the output register (OUTBUF) before starting transmission. This means that the transmit enable line cannot be used to turn the transmitter on and off in the middle of a byte since the remainder of the byte would never be transmitted.

### 2.2.5 Initialize Pulse

The initialize pulse resets the counter to zero and opens the host power relay contacts. It also clears the registers in the DRV-11, thus clearing the transmit enable signal.

### 2.2.6 Load Pulse

The load pulse resets the counter and holds the TYHB line low for the duration of the load pulse (nominally 300 nano-seconds). If it is the first load pulse after the transmit enable line has been raised (=1), it also clears the hold-off flip-flop. The hold-off flip flop prevents handshaking from occurring until the first load pulse after the transmit enable line goes high.

### 2.2.7 Interrupt Request

A transmit interrupt can occur only after the last data bit has been received by the IMP and both of the following conditions have been met.

XMT enable is set	(=1)	Bit 0 in DRCSR
XMT interrupt enable is set	(=1)	Bit 6 in DRCSR

If one wishes only to poll the interface, only the XMT enable needs to be set. Bit 7 of the status register (DRCSR) indicates the state of the INT A line. If an interrupt has been requested, bit 7 will be a one. If bit 6 is also set, an interrupt will actually occur.


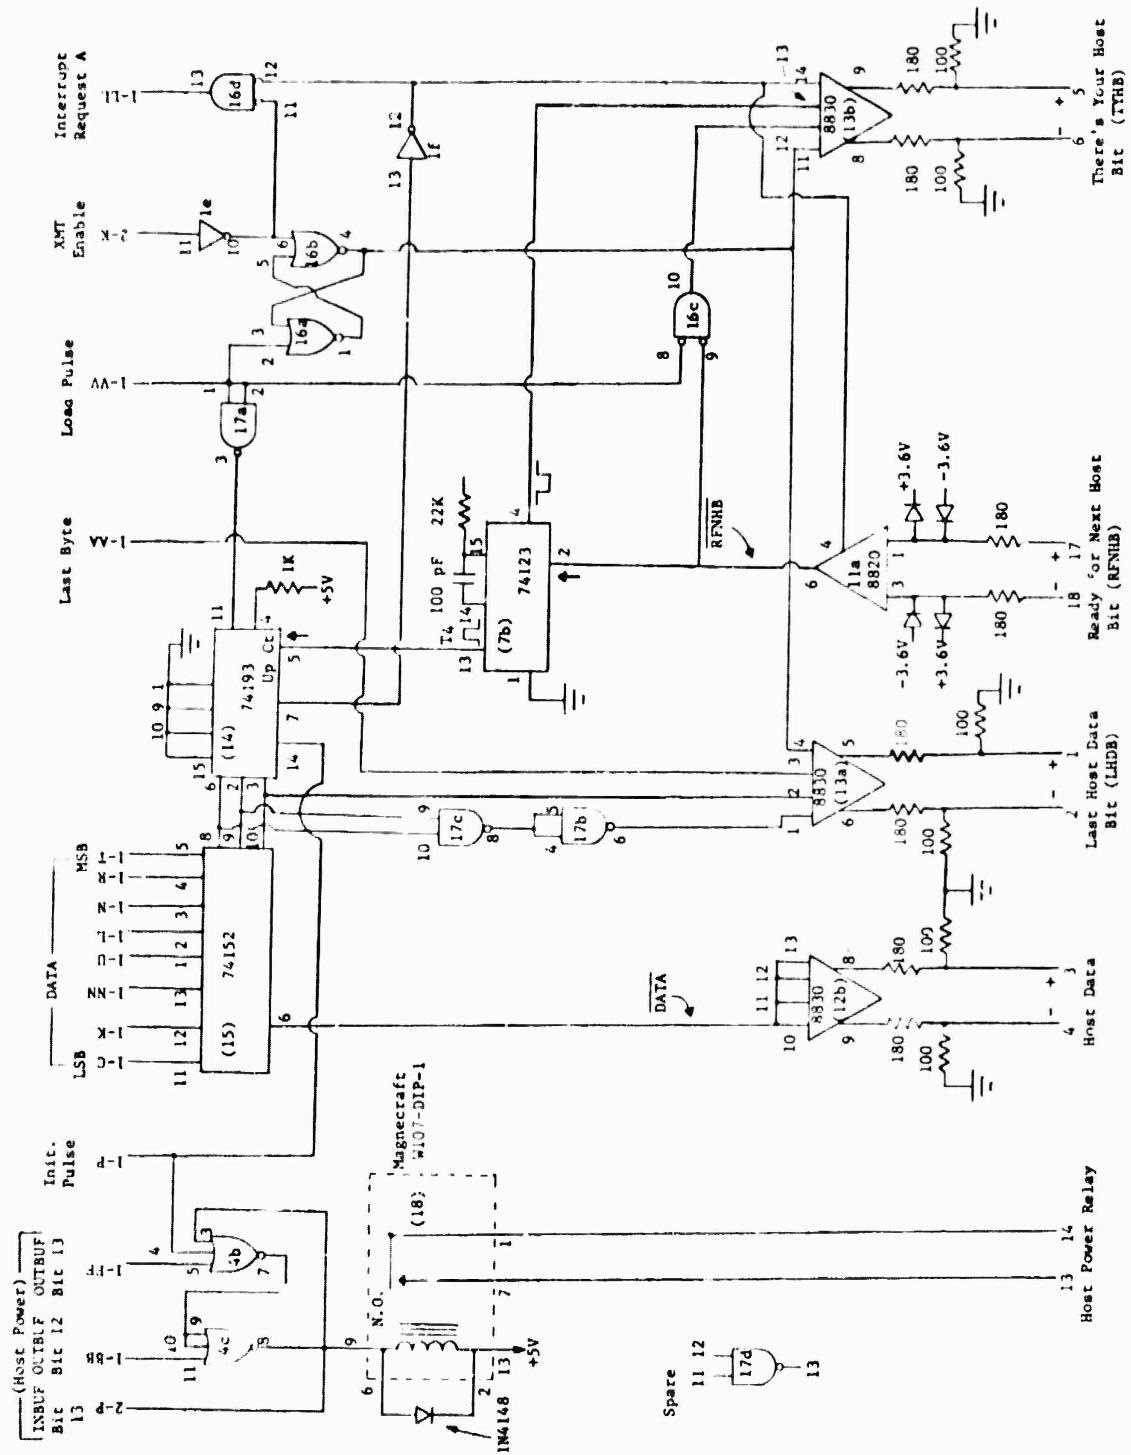


Figure 2 - Trajet Logic

PRECEDING PAGE IS BLANK - NOT FILMED

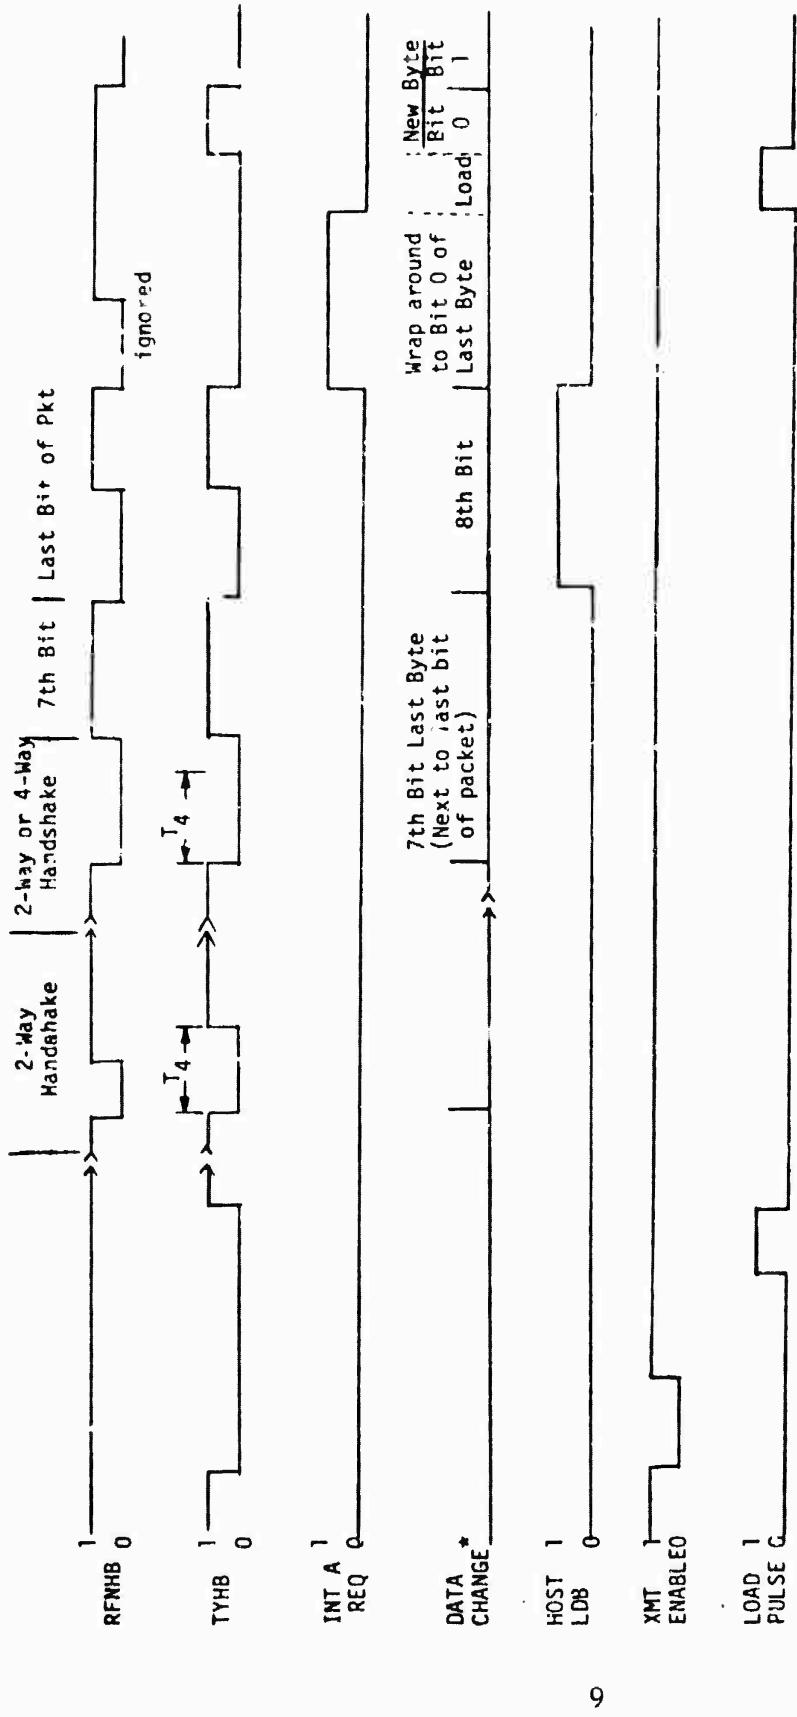

\* Vertical bar indicates transition

#### Nomenclature

- ↑ Next to an input lead indicates the device is clocked or triggered by a low to high level transition.
- ↓ Next to an input lead indicates the device is clocked or triggered by high to low level transition.
- [] A positive pulse appears on this lead. The width of the pulse may be indicated as well.
- [] A negative pulse appears on this lead. The width of the pulse may be indicated as well.
- || On timing diagram. Signal is irrelevant.
- > Discontinuous in time; timing sequences separated by a break
- > may not follow each other in normal operation.

figure 3  
TRANSMIT TIMING

The receive section supplies one byte of data along with control information. The receiver is divided into two parts. One part senses the status of the IMP power relay contacts and the other part performs the handshaking and serial to parallel conversion.

### 3.1 IMP Power Sensing

The IMP power relay contacts ground the filtered input to the inverter. The 39 ohm resistor, 5 microfarad capacitor and the 10K resistor provide some debouncing of the relay contacts. This supplies a signal through the inverters directly to the DRV-11 (bit 12). The high to low and low to high transitions generate a pulse via the EXCLUSIVE-OR gate and time delay which sets the power interrupt flip flop. See figure 4 illustrating the EXCLUSIVE-OR pulse generator. An interrupt request is generated if the receive enable bit is set in the DRCSR (bit 1). An interrupt will actually occur if bit 5 is also set. These actions will occur independent of actions in the data section of the receiver. Bit 14 (=1) indicates that the interrupt was initiated by the IMP power relay (IMP recently down) and bit 12 indicates the current status of the IMP relay.

### 3.2 Data Section

The data path in this section is from the line receiver directly to the serial-in, parallel-out shift register (74164). The data is strobed into the shift register T1 sec. after the TYIB signal is asserted (=1). The time delay T1 allows deskewing of the signals on the TYIB line and the data and LDB lines. This time delay can be varied by changing the timing capacitor. After the data is strobed into the register, the RFNIB line is dropped (=0). It is held down for a minimum period of T2 sec. and possibly longer if the TYIB line has not dropped when T2 has elapsed. The RFNIB line will not go high again until the TYIB line is dropped. This meets the requirement of the 4-way handshaking procedure. The period T2 occurring after the data is strobed into the register is to meet the minimum pulse width requirements when using the 2-way handshaking procedure on long cables. The pulse width requirement at the IMP end of the cable can also be met by changing the appropriate timing capacitor on the interface card.

### 3.2.1 Interrupt Requests

An interrupt request can be generated only if the Receive enable line is high (DRC5R bit 1 is 1) and one of the following is true:

- a) 8 bits have been received since the last interrupt as counted by the 74193 counter.
- b) The Last Data Bit (LDB) flip flop has been set by receipt of an LDB signal.
- c) The power status flip flop has been set due to a change in the status of the IMP power relay contacts. (Connecting and disconnecting the cable will have the same effect.)

### 3.2.2 Initialize and Read Pulses

Both the read and the initialize pulses produce a pulse on the clear line in the interface. The initialize pulse is inverted and fed directly to the clear line. The trailing edge of the read pulse indicates that the data has been read from the register. The pulse generator T3 generates a 1 microsecond pulse AFTER the trailing edge of the read pulse. When the clear line is lowered (=0), the register, flip-flops, and counter are cleared. T2 pulse generation is inhibited and the TYIB input signal is held low for the duration of a clear pulse.

### 3.2.3 Bit 15 Output

Bit 15 is the OR value of bit 14 (IMP recently down) and bit 11, the LIDB bit in the receive register. It is "1" only if the last bit of a packet has been received (the only time the LIDB line is asserted) or the the IMP has lost and/or regained power (its relay contacts changed position).

### 3.2.4 Data

The data bits appear in the low order byte of the receive register (bits 0-7). The most significant bit (MSB) or bit 7 is the first bit received from the line and the least significant bit (LSB) or bit 0 is most recently received bit.


### 3.2.5 Bit Count

The three bits (8,9,10) indicate how many bits have been received since the last interrupt. If a number other than 0 appears in these three bits, a full byte has not been received. The bits are a binary number indicating how many bits have been shifted into the register. The data bits are shifted into the low order byte starting at bit 0 and moving toward bit 7. Thus, the MSB starts at bit 0 and moves toward bit 7, its final destination. If the bit positions

were numbered 1 to 8 (LSB to MSB) instead of 0 to 7, then  
the bit count (10,9,8) is the position of the MSB. 000  
means the MSB has reached its final destination.

### 3.2.6 Receiver Timing

See the timing diagrams for the receiver in figure 6.

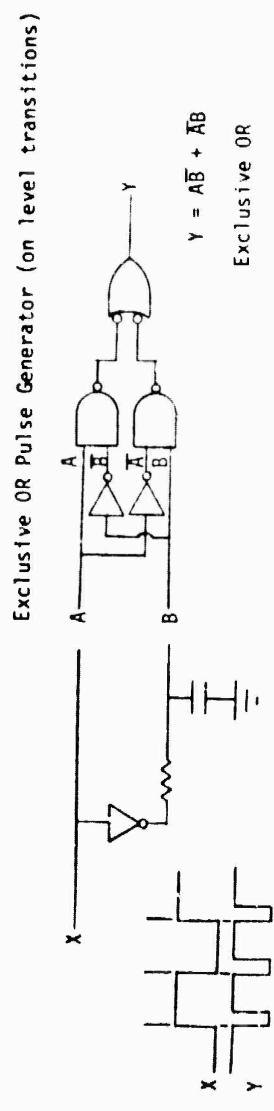

Truth Table

	A	B	Y
Inputs	0	0	1
	0	1	0
Output	1	1	0

Exclusive OR

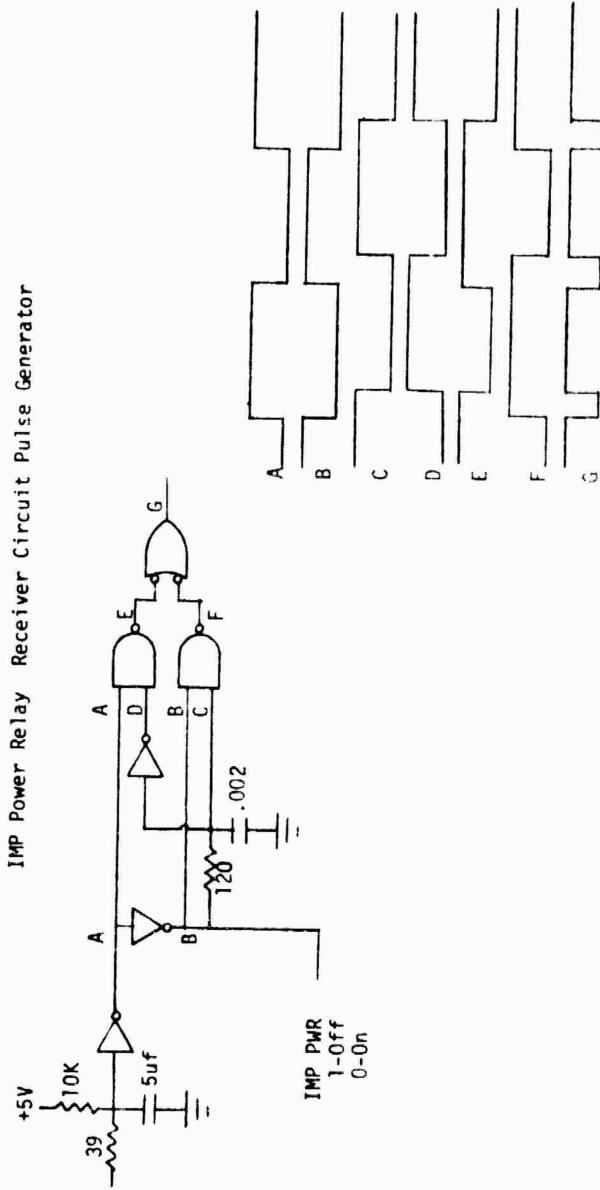


Figure 4 - EXCLUSIVE-OR Pulse Generator

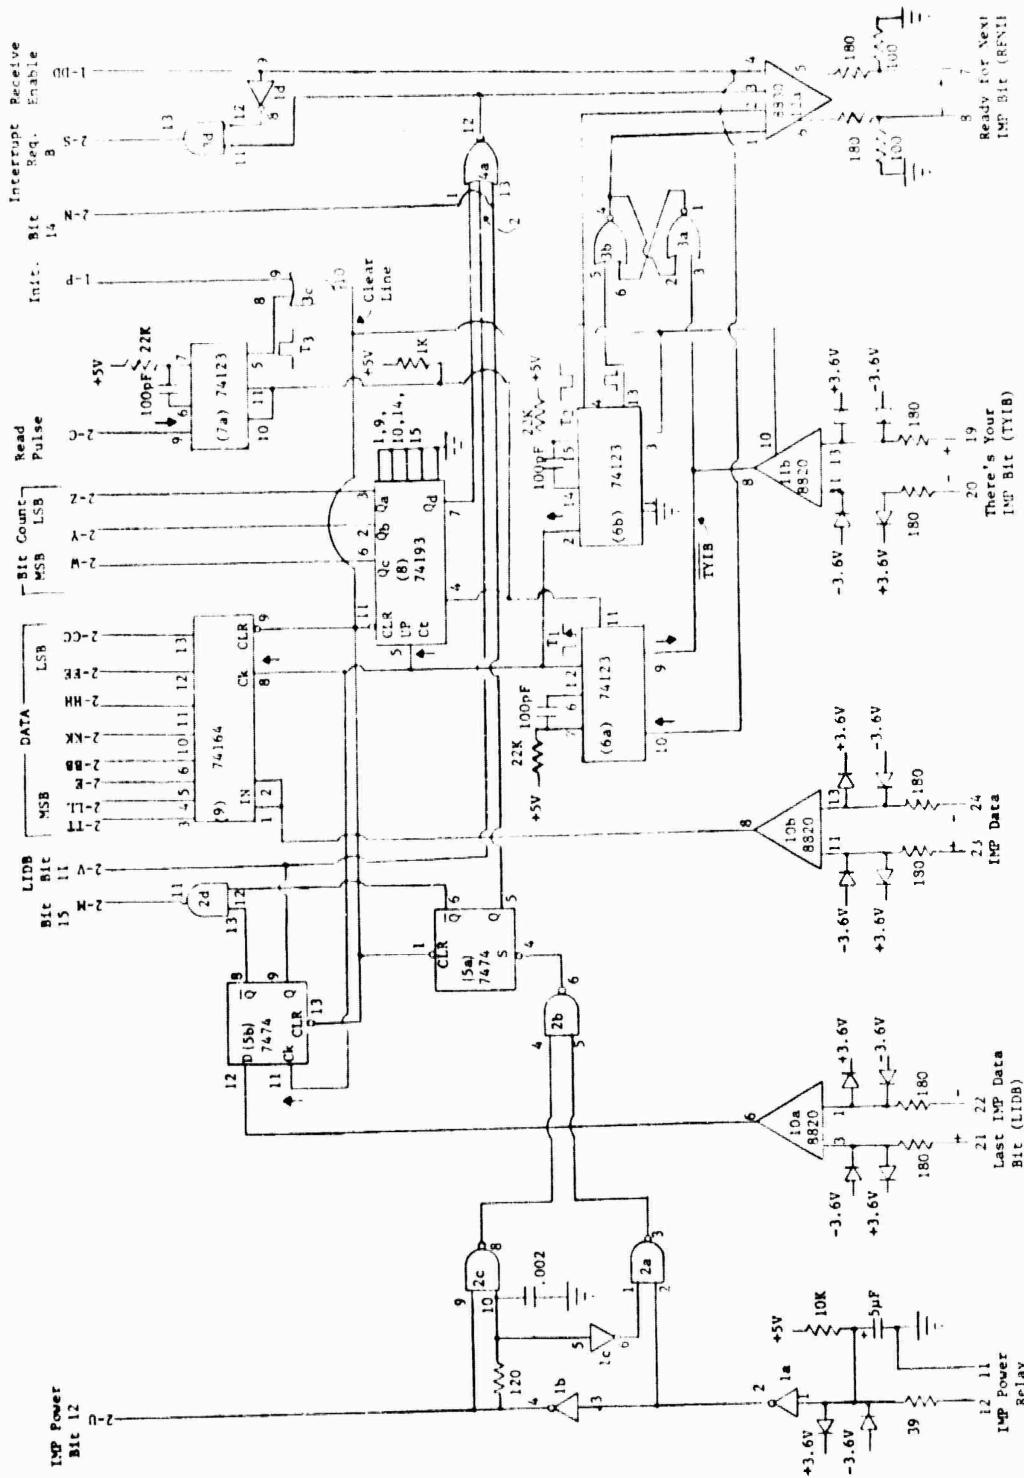


Figure 5 - Receive Logic

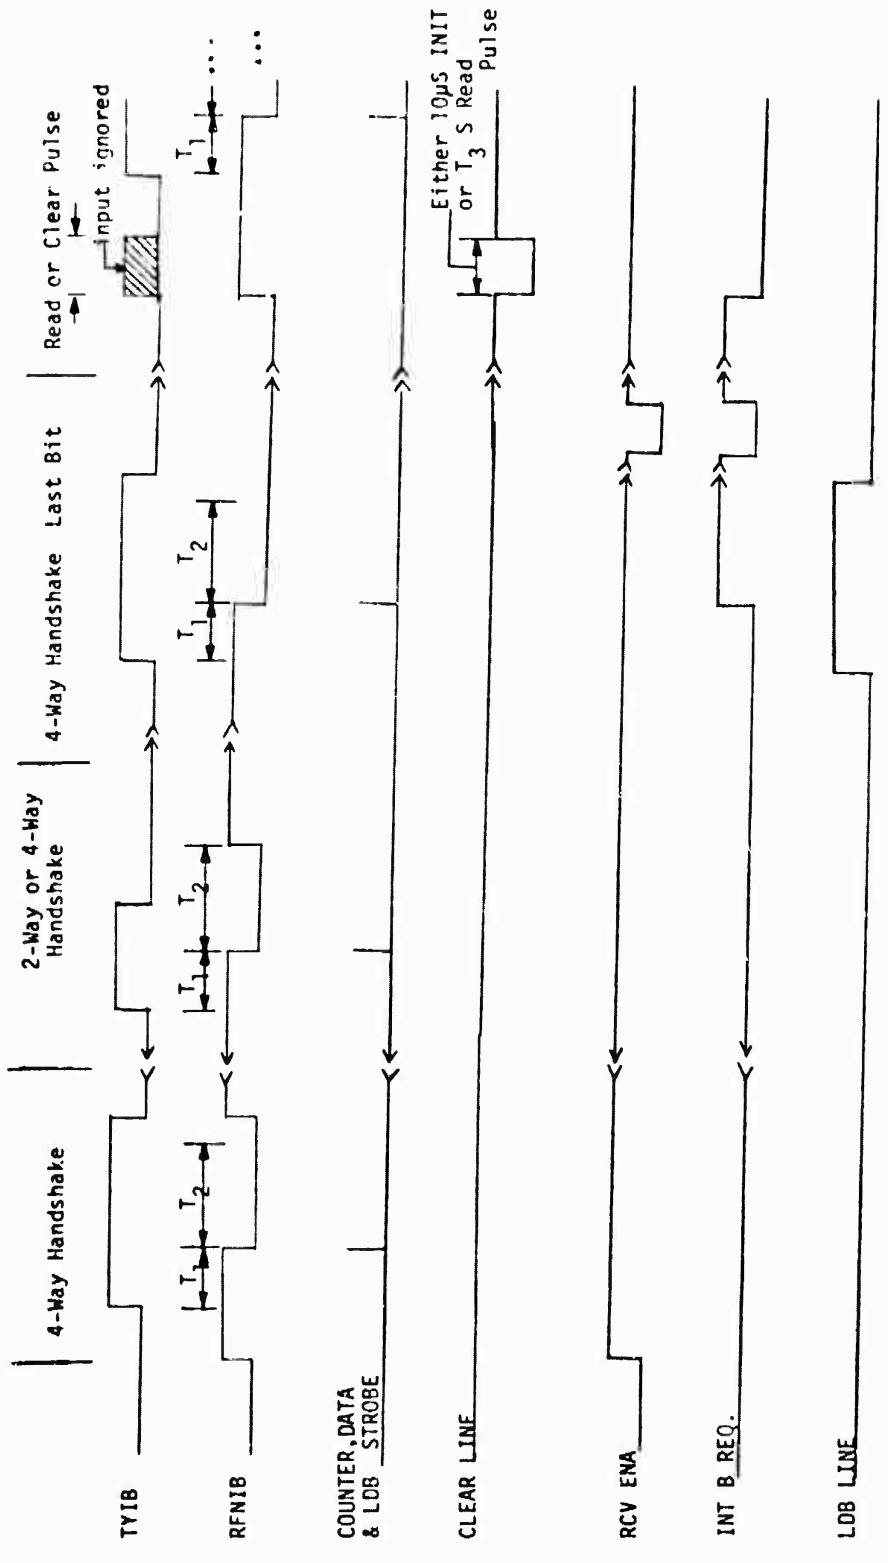


Figure 6  
RECEIVE UNIT TIMING

Nomenclature

- ↑ Next to an input lead indicates the device is clocked or triggered by a low to high level transition.
- Next to an input lead indicates the device is clocked or triggered by a high to low level transition.
- A positive pulse appears on this lead. The width of the pulse may be indicated as well.
- A negative pulse appears on this lead. The width of the pulse may be indicated as well.
- ☒ On timing diagram. Signal is irrelevant. Input can be either 0 or 1.
- Discontinuous in time; timing sequences separated by a break may not follow each other in normal operation.

## 4.0

## Electrical Specifications

This section provides details on the power wiring for the board and data on the line drivers and receivers.

### 4.1 Line Drivers and Receivers (DM 8820 and DM 8830)

The line drivers are National DM 7830/8830 differential balanced drivers. The receivers are National DM 7820/8820 differential balanced receivers. Connection details are shown in the figure showing drivers and receivers. The receivers provide a high impedance (2.5K or 5K) termination of the line, with protective clamping at + and - 4 volts with respect to ground. When an input is out of the + or - 4 volt range, the input impedance from the out of range input to ground is 180 ohms. The maximum input voltage for any input lead should be held to + or - 10 volts with respect to ground. This is the dissipation limit of the protection circuit.

The outputs are balanced differential and provide a 1.2 volt differential voltage swing with a +.6 volt common mode voltage (both measured open circuit).

Logic State	Output	
	A	B
0	0 V	+1.2 V
1	+1.2 V	J V

The output impedance is 130 ohms differential balanced with respect to ground (or 65 ohms to ground from each side).

### 4.2


### Power Distribution

The power distribution is shown in figure 8.

Figure 7


Line Drivers & Receivers  
Electrical Specifications

I. Drivers: Differential Balanced Drivers (130 ohms balanced,  
65 ohms each side to ground)

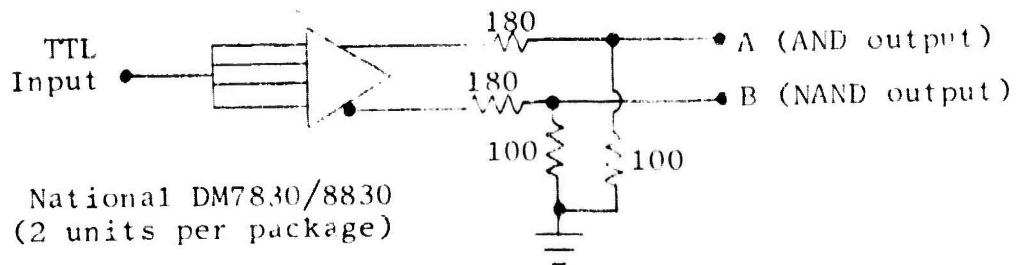

Logic	Input Voltage	Outputs (volts)	
		A	B
0	0 V	0	1.2
1	3 V	1.2	0

II. Receivers Balanced Differential, NO termination

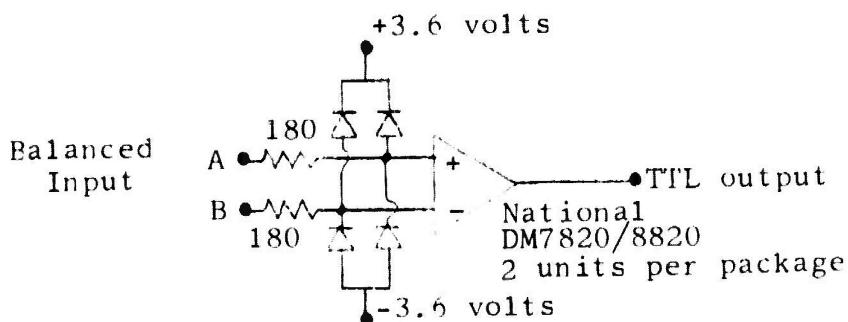


Diodes are 1N4148 or equiv.

Typical threshold voltage is 100 mV.

Non-inverting input resistance is 2.5K ohms to ground.  
(pins 3 & 11)

Inverting input resistance is 5K ohms to ground (pins 1 & 13).  
Protection clamps input to receiver at  $\pm$  4 volts. 180 ohm  
 $\frac{1}{4}$  watt input resistor will fail with sustained inputs  
above 10 volts.

The 7820 and 7830 operate over the military temperature  
range (-55°C to 125°C). The 8820 and 8830 operate  
over the commercial temperature range (0°C to 70°C).

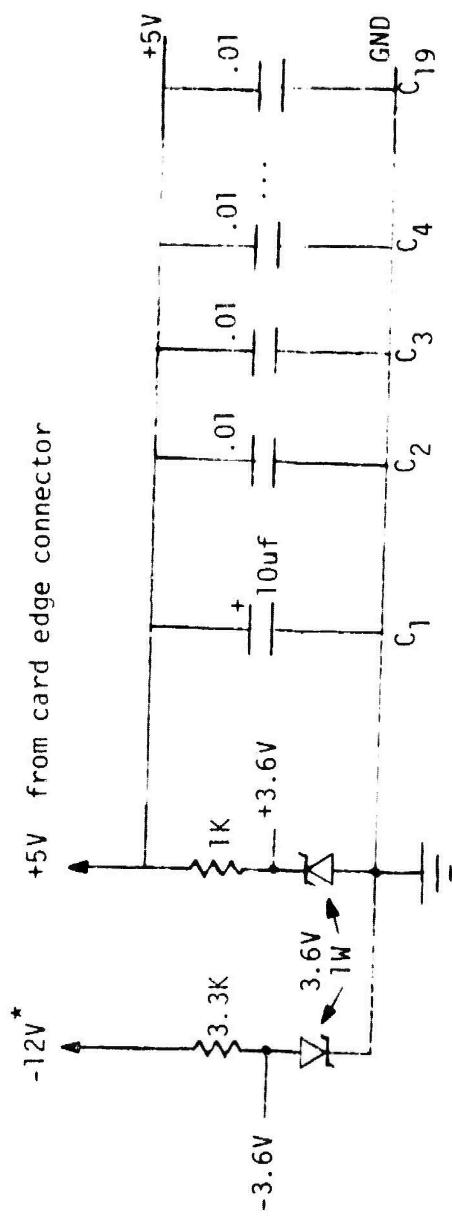

- \* If -12V is not available, leave resistor unterminated.
- The Zener will still protect against negative transients.

Figure 8 - POWER DISTRIBUTION

## 5.0

### Changing Time Delays

The value of the time delays is linearly proportional to the value of the timing capacitor over reasonable values of time delay. Thus to change the time delays, the timing capacitors should be changed accordingly. All time delays shown are set to one microsecond.

## 6.0


### Connectors

The I/O interface card makes 4 connections to the outside world.

- a) Edge connector on the card. DEC double height board. +5 volts and ground are used. Current consumption is about 600 mA.
- b) Berg 40 pin connectors (2), one for input and one for output to parallel interface. They are labeled J1 and J2 corresponding to DEC nomenclature. (Pin numbers at the top of the schematics indicate the connector number and pin number. Connector 2, pin VV is 2-VV.) The connector number is DEC H-856
- c) Amphenol 31 pin female bayonet connector. This is specified by the BBN 1822 report. The pin numbers for this connector are on the bottom of the schematics along with the signal name. The connector is Amphenol number 48-10R-18-31S.

## 6.1 Loopback Test Connector

Originate Pin No.	Destination Pin No.	Signal Name
1	21	+ LDB
2	22	- LDB
3	23	+ Data
4	24	- Data
5	19	+ TYB
6	20	- TYB
7	17	+ RFNB
8	18	- RFNB
11	13	Power Relay
12	14	Power Relay

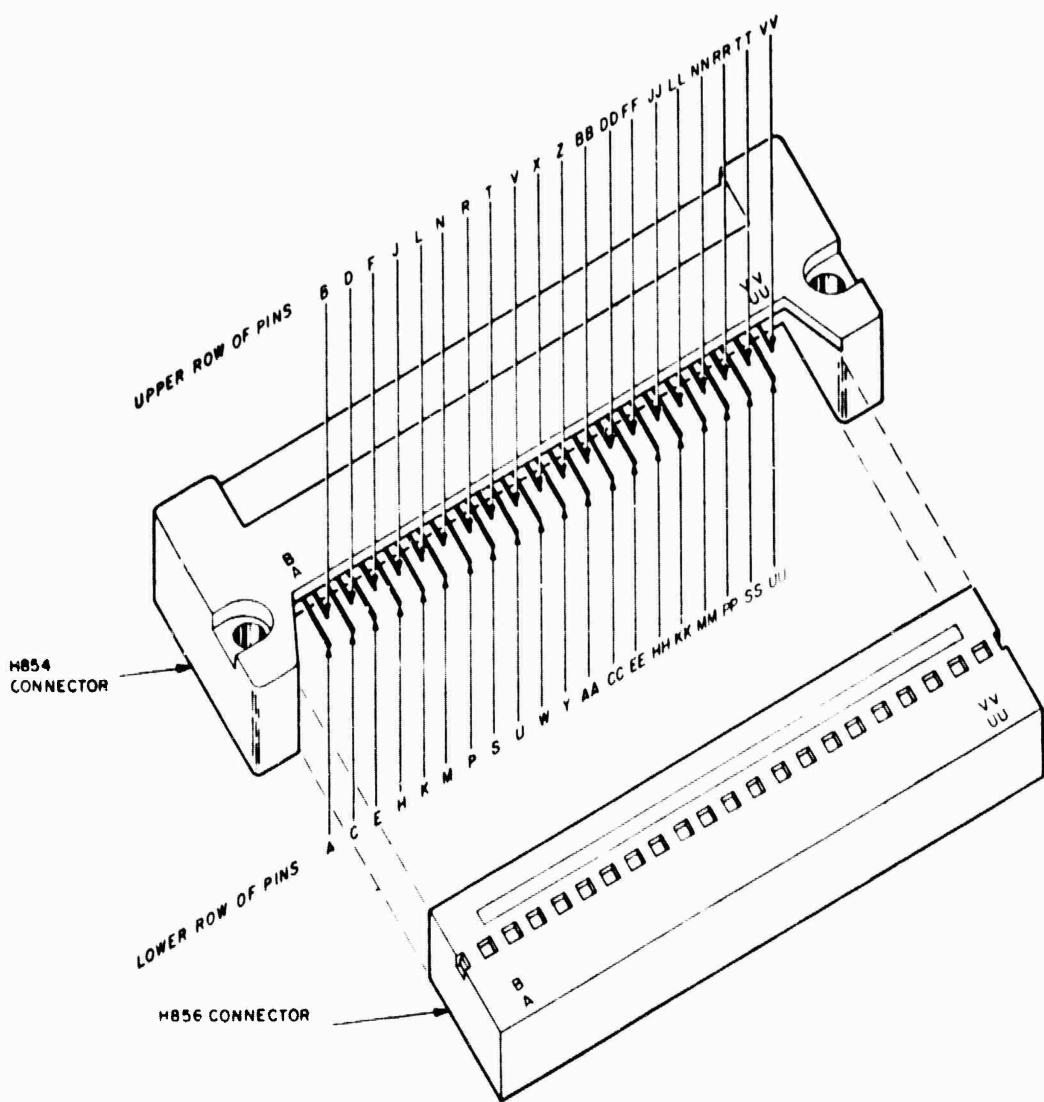

J1 or J2 Connector Pin Locations

Figure 6 - Berg Connector Pin Locations

The programmer has 3 registers to deal with in programming the interface: the status register, the input buffer, and output buffer.

### 7.1 Status Register

This register has 4 read/write enable bits, and 2 read only status bits. There are two enable bits, one each to allow operation of the transmitter and receiver. The two status bits indicate whether a receive interrupt request has occurred. An interrupt request can occur only if the respective transmitter or receiver has been enabled. An interrupt will actually occur if the appropriate interrupt enable bit (one for receive & one for transmit) has also been set.

### 7.2 Input and Output Buffers

Both the input and output buffers are divided into a data section (bits 0:7) and a control section (bits 8:15). The user should not write into the transmit register or read from the receive register if they are in the process of transmitting or receiving a byte of data. Reading or writing into a register while it is in the process of transferring a byte may cause some bits to become lost and/or out of synchronization. This can be avoided by waiting until either an interrupt or interrupt request (as seen in the status register) is present before accessing the register.

### 7.3 Transmit (Output) Register

One byte of data will be transmitted each time this register is loaded if the transmit enable bit is set. Any old data will be cleared upon loading, independent of the state of transmit enable.

#### 7.3.1 Data Section (Bits 0:7)

Bit 0 is least significant bit. Bit 7 is the most significant bit and is the first bit to be transmitted.

#### 7.3.2 Control Section

Bit 11 (LHDB)- If this bit is set, the last host data bit line will go high during the transmission of the last data bit in the byte (bit 0).

Bit 12 - Host Power Relay Set- If this bit is set, the host power relay contacts will be closed indicating host is up. This bit need be set only once since the interface will latch the value. Either an initialize pulse or setting bit 13 will clear the latch. The latch will remain in the last state to which it was set. Bit 13 of the receive register contains the status of the latch.

Although the power latch can be set any time, it is recommended that the relay be turned on before the transmit enable bit is set in the status register. This prevents a data byte from being transmitted when the relay is turned on. It is important because the host must wait until the contacts have solidly closed before transmitting data which is approximately 1 mS for the relay used.

Bit 13 - Host power relay clear - Setting this bit clears the HOST power relay.

#### 7.4.3 Receive Register

Reading the receive register clears the receive buffer making it ready for another byte. Thus program testing of control bits should be done after the contents of the receive register have been moved elsewhere. If the receiver wishes to suspend receipt of more data he can:

- a) Not read the receive register.
- b) Clear receive enable after a receive interrupt and then read the receive buffer. In this case he has access to all data accepted by the interface and blocked data at the entry point to the interface.
- c) Clear receive enable without waiting for an interrupt. In this case some bits may be lost. Setting receive enable will start the receiver again, but not necessarily where it left off.

#### 7.4.1 Data (Bits 0:7)

Bit 0 is LSB and the last one received from the line.  
Bit 7 is MSB and the first one received from the line.

#### 7.4.2 Control

Bits 8,9,10 - Point to last bit received in byte.

Bit 11 - (=1) Indicates last data bit line was asserted concurrently with receipt of the last data bit.

Bit 12 - IMP Power status. Indicates current status of the IMP power relay.

Bit 13 - Host power relay status. 0 - ON            1 - OFF

Bit 14 - Indicates the IMP has been down since the last interrupt was serviced. (i.e. the interrupt was generated by IMP changing status.) (see bit 12 for current status)

Bit 15 - Either bit 11 or 14 is a 1. This bit being set indicates the current interrupt requires special handling either because it is the last byte of a packet, or the IMP has been down.

## Programming the 1822 Interface (with the DRV-11 or DR11-C)

The bus address and interrupt vector locations shown are for the first DR11-C (DRV-11) in a system. If there is more than one DR11-C, or other devices competing for the same address area, the proper numbers may not be the ones shown. Check the appropriate system documentation and/or the hardware address jumpers on the DR11-C to be sure.

RCV Req. B	Not Used								XMT Req. A	XMT Int. A	RCV Int. B	Not Used				RCV Enable (CSR1)	XMT Enable CSR 0
	15	14	13	12	11	10	9	8				7	6	5	4		

Control and Status Register - DRCSR 167770

Not Used	Clear Host	Set Host	Last Byte	Not Used				DATA									
				Pwr.	Pwr.	12	11	10	9	8	7	6	5	4	3	2	1

Transmit Register - OUTBUF 167772

1V 14	IMP was down	NO Host	NO IMP	Last Byte	Bit Count				DATA									
					Pwr.	Pwr.	12	11	10	9	8	7	6	5	4	3	2	1

Receive Register - INBUF 167774

Control and Status Register DRCSR 167770

Bit Function

**Bit 15-** This bit indicates that the DRV-11 has received a request from the interface to generate an interrupt. If bit 5 of this register is set, an interrupt will occur. This bit is read only.

**Bit 14-8 NOT USED**

**Bit 7** This bit indicates that the DRV-11 has received a request from the interface to generate a transmit interrupt. If bit 6 of the interface is set, an interrupt will occur. This bit is read only.

**Bit 6** Transmit interrupt ENABLE- Setting this bit allows interrupts to be generated upon completion of transmission of each byte of data. This bit is read/write.

**Bit 5** Receive interrupt ENABLE- Setting this bit allows interrupts to be generated upon receipt of each byte of data and/or a change in the status of the IMP power bit in the interface. This bit is read/write.

**Bits 4-2 NOT USED**

**Bit 1** Receive enable- Setting this bit enables the receiver (by allowing the RFNB line to go high). The interface will then receive bits until either it is full, or it receives the last data bit (LDB) signal. At this point the interface stops and requests an interrupt. It will not accept any new bits until the present load of bits is read from INBUF. This bit is read/write.

**Bit 0** Transmit enable-Setting this bit enables the transmitter (by allowing the TYB line to go high). The interface will transmit all bits which are loaded into OUTBUF after this bit is enabled. This bit is read/write.

Transmit Register OUTBUF 167772

All bits are read/write. Transmission of a byte is initiated each time OUTBUF is loaded, the transmitter is enabled (bit 0 of DRCSR is set).

Bit Function

**15-14** Not used

**13** Setting this bit releases the Host relay contacts. This bit need be set only once, as the interface holds the information in a latch. Either bit 13 OR bit 12 should be set. NOT BOTH.

**12** Host Power Set- This bit sets the Host relay contacts. As with bit 13, this bit need be set only once, since the interface holds the information in a latch. Either bit 13 or bit 12 should be set. NOT BOTH. No data should be sent until at least 1 millisecond after this bit is set to allow for relay contact bounce.

**11** Last Data Byte- This bit causes the last data bit (LDB) line to go high concurrently with the transmission of the last bit of the byte. This is typically set with the last byte of a packet.

**10,9,8** NOT USED (On the early unit, these bits indicated the last bit position to be transmitted within the byte.)

**7-0** DATA (Bit 7 is the high order byte, and bit 0 is the low order byte.)

Receive Register INBUF 167774

The interface will receive bits until either it is full, or it receives the last IMP data bit (LIDB) signal. At this point the interface stops and requests an interrupt. It will not accept any new bits until the present load of bits is read from INBUF.

BIT	FUNCTION
15	Special condition - if set, the byte of data just received requires special handling. (i.e. it is either the last byte of a packet, or there has been a change in the status of the IMP relay contacts (IMP recently down)).
14	IMP just went down or IMP has been down and just came up  0 - No change in IMP status 1 - IMP has been down recently  (see bit 12 for current status).
13	HOST POWER- Indicates the current status of the Host power relay as set or cleared by either bit 12 or 13 respectively in the transmit register OUTBUF. This bit should be interpreted as follows:  0 - HOST power relay contacts closed (ON) 1 - HOST power relay contacts open (OFF)
12	IMP POWER- Indicates the current status of the IMP power relay. The bit should be interpreted as follows:  0 - IMP power ON 1 - IMP power OFF (See bit 14 to determine if the interrupt was generated by the power circuit.)
11	LAST BYTE - If this bit is set, the data byte is the last one in a packet. Bits 8,9,10 should be checked to determine the position within the byte of the last bit transmitted.
10,9,8	Bit Count - The three bits (10,9,8) indicate how many bits have been received since the last interrupt. If a number other than 0 appears in these three bits, a full byte has not been received. The bits are a binary number indicating how many bits have been shifted into the register. The data bits are shifted into the low order byte starting at bit 0 and moving toward bit 7, its final destination. If the bit positions were numbered 1 to 8 (LSB to MSB) instead of 0 to 7, then the bit count (10,9,8) is the position of the MSB. 000 means the MSB has reached its final destination (position 8).
7-0	DATA - Bit 7 is the MSB of the data byte and is the first bit of the byte to be received from the IMP.

INTERRUPT VECTORS FOR THE INTERFACE

Transmit Interrupt Vector

Loc.	Contents
300	XMT *(PC)
302	200 *(PS)

Receive Interrupt vector

Loc.	Contents
301	RCV *(PC)
306	200 *(PS)

XMT- Address of transmit interrupt routine  
RCV- Address of receive interrupt routine

## 8.0

## Diagnostics

It is assumed that the DR11-C or DRV-11 is functional before these tests are attempted. If the above is not true, the programmer/user has no means of accessing the special I/O card. If in doubt, the DR11-C tests should be run first.

### 8.1 Packet Source/Sink

#### 8.2 Scope Loop

##### 8.1.1 Packet Source Sink Program

###### 8.1.1.1 General

The packet source and sink program can be used to make the interface do handshaking for hardware and software checkout purposes.

The transmit part continuously loads the contents of 16 sequential memory locations into the transmit buffer. The low order byte is transmitted as data. Bit 11 of the high order byte may be set both as an end of packet indicator and also to test the LDB lines in the interface.

The receive or sink program circularly fills a 16 word area in memory with the contents of the receive register. The user may stop the program at any time to see the contents of the last 16 bytes received.

### 8.1.2

### Running Source/Sink Program

- A) Location 602 determines what the program does. It is loaded into the control and status register of the interface. It should be loaded with one of the following.
  - 101 Transmit Only
  - 42 Receive Only
  - 143 Transmit & Receive
- B) Locations 440 to 476 (octal) contain the transmit buffer. They should be filled with the data and control as the user wishes. Words from the buffer are successively loaded into the output buffer of the interface.
- C) Load the program into memory using ODT or switch register. Alternately assemble the listing and load it from some storage device.
- D) The program starts at location 600 (octal) after it is loaded.

### 8.1.3 Source/Sink Program

Memory location (octal)	Contents (octal)	Function
300	1000	\
302	200	- Interrupt Vectors
304	700	
306	200	/
400		\
		- Receive Buffer 16 words (8 received bytes)
436		/
440		\
		- Transmit Buffer 16 words (8 transmitted bytes)
476		/
600	12737	MOV C(loc 602),DRCSR
602	see table	101-Transmit 42-Receive 143-Bot..
604	167770	
606	12705	R5=440
610	440	
612	12704	R4=400
614	400	
616	12706	R6=2000
620	2000	
622	12537	MOV (R5)+,OUTBUF Start transmitter
624	167772	
626	777	BR 626 Wait loop
700	13724	MOV INBUF,(R4)+
702	167774	
704	22704	COMP #440,R4
706	440	
710	1002	BNE 716
712	12704	R4=400
714	400	
716	2	RTI
1000	12537	MOV (R5)+,OUTBUF
1002	167772	
1004	22705	COMP #500,R5
1006	500	
1010	1002	BNE 1016
1012	12705	R5=440
1014	440	
1016	2	RTI
167770		DRCSR
167772		OUTBUF
167774		INBUF

## 8.2.1 Running Scope Loop Program

- A) Load Source/Sink program in 8.1.3 .
- B) Location 602 should be 143 (transmit & receive)
- C) Locations 440 to 446 should be:

440	000000
442	000002
444	000200
446	004001

- D) Change contents of location 1006 from 500 to 450 so transmitter loops after 4 bytes.
- E) Start program at location 600 (octal).

## 3.2.2

## Using Scope Loop

The loop program transmits two word packets. They are transmitted continuously. They are:

Word 1 000002 octal


Word 2 100001 octal

The most significant bit (MSB) of each word is transmitted first. Thus, the bytes are sent as follows:

Memory Location	Byte No.	Octal MSB	Octal LSB	Binary MSB	Binary LSB
440	1	000		00000000	
442	2	002		00000010	
444	3	200		10000000	
446	4	001		00000001	(LHDB asserted with LSB of byte 4)

The last host data bit (LHDB) line is asserted with the last bit (LSB) of the second word.

Scope Pattern for Test Program  
(with loopback connector)

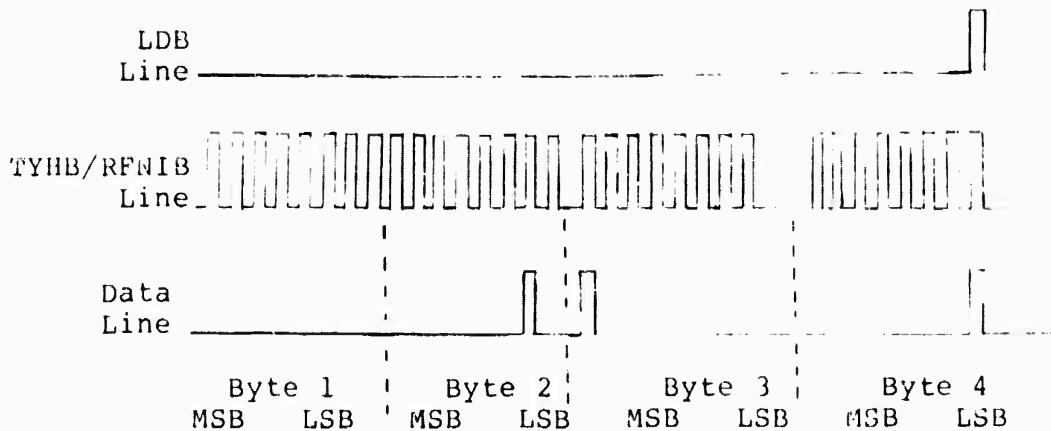

## Appendix

A	DR11-C Specifications (from DEC Peripherals and Interfacing Handbook)	35
B	Parts list for Interface	40

## DR11-C

### GENERAL DEVICE INTERFACE, DR11-C

#### DESCRIPTION

The DR11-C is a general-purpose interface between the PDP-11 UNIBUS and a user's peripheral. The DR11-C provides the logic and buffer register necessary for program-controlled parallel transfers of 16 bit data between a PDP-11 System and an external device. The interface also includes status and control bits that may be controlled by either the program or the external device for command, monitoring, and interrupt functions.

The DR11-C interface consists of three functional sections: address selection logic, interrupt control logic, and device interface logic.

The address selection logic determines if the interface has been selected for use, which register is to be used, if a word or byte operation is to be performed, and what type of transfer (input or output) is to be performed.


The interrupt control logic permits the interface to gain bus control and perform program interrupts to specific vector addresses. The interrupt enable bits are under program control; the interrupt bits are under control of the user's device.

The DR11-C interface logic consists of three registers: control and status, input buffer, and output buffer. Operation is initialized under program control by addressing the DR11-C to specify the register and the type of operation to be performed.

If an output operation is specified, information from the UNIBUS is stored in a 16-bit register. Once this register has been loaded under program control (e.g., MOV RO, OUTBUF), the outputs are available to the device until the register is loaded with new data from the bus. The register can also be read onto the bus. Upon transfer of data to the buffer register, a NEW DATA READY control signal is supplied to indicate to the user's device that data has been loaded by means of a DATO or DATOB bus cycle and is read by means of a DATI or DATIP bus cycle.

When an input operation is specified, the DR11-C provides 16 lines of input to UNIBUS transmitters. This term is data from the user's device to be read onto the bus. A control signal, DATA TRANSMITTED, informs the device that the input lines have been read. The input lines, which are not buffered, can be read by a DATI bus cycle (e.g., MOV INBUF, RD).

The control and status register provides six bits that can be used to control and monitor user functions. Two of these bits are interrupt enable (INT ENB) bits under control of the program. Two bits (REQ A and B) are under direct control of the user's device and can only be read by the program. These bits can be used either to initiate interrupt requests or to provide flags that can be monitored by the program. The remaining two bits (CSR0 and CSR1) are read/write bits that can be controlled by the program to provide command or monitoring functions. In the main-

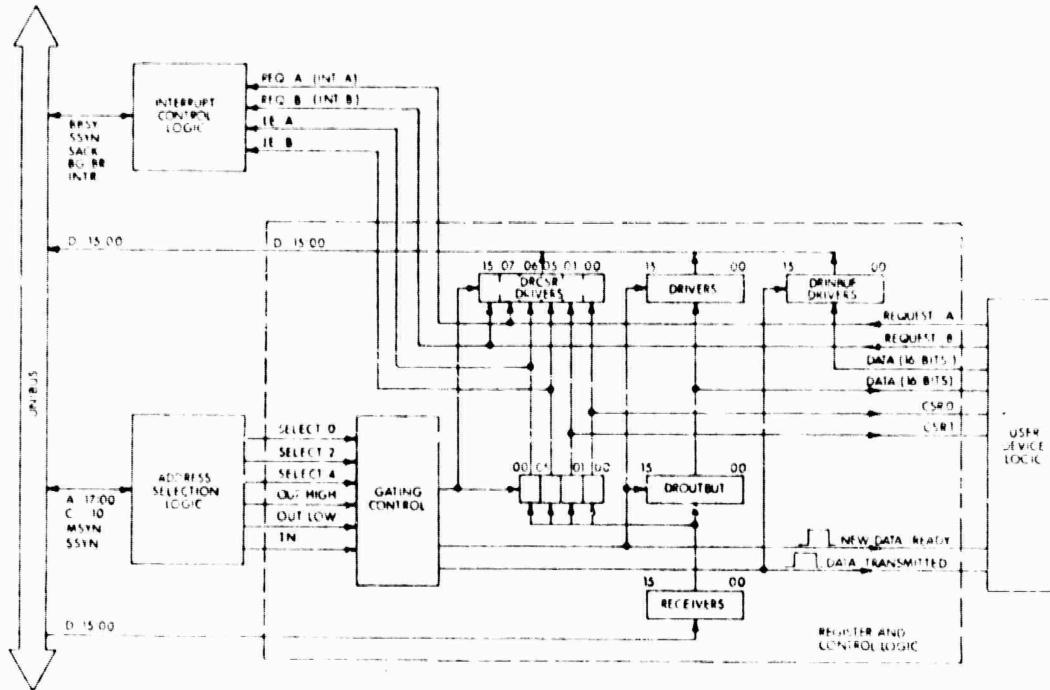

DR11-C Interface, Block Diagram

4-201

4-200

## DR11-C

tenance mode, they are also used to check operation of the interface.

A maintenance cable, which is supplied with the interface, permits checking of the DR11-C logic by loading the input buffer from the output buffer rather than from the user's device. Thus, a word from the bus is loaded into the output register and the same word appears when reading the input buffer, provided the interface is functioning properly.

The DR11-C can also be used as an interprocessor buffer (IPB) to allow two PDP-11 processors to transfer data between each other. In this case, one DR11-C is connected to each processor bus and the two DR11-Cs are cabled together, thereby permitting the two processors to communicate.

### Physical Description


The DR11-C interface is packaged on a single quad module that can be plugged into a small peripheral slot (SPC).

The module has two Berg connectors for all user input/output signals. Two M971 connector boards, which are not supplied with each interface, can be used to bring all input/output lines to individual pins on a back panel via two H856 cables. Note that this cable is a "mirror image" rather than a straight one-to-one cable.

The following accessories are available for interfacing:

- BC08R (Berg-to-Berg) flat cable. Available in lengths of 1, 6, 8, 10, 12, 20, and 25 feet. When ordering, the dash number indicates the desired cable length; e.g., BC08R-1 or BC08R-25.
- M971 connector board. A single-height by 8-1/2 in. board that brings the signals from one Berg connector to the module fingers.
- EC1K-25 cable. Consists of a 20 twisted-pair cable with a Berg connector on one end only. Available in 25 ft lengths.
- H856 Berg connector. Includes an H856 Berg connector and 40 pins. Crimping tools are available from: Berg Electronics, Inc., New Cumberland, Pa. 17070.

### REGISTERS

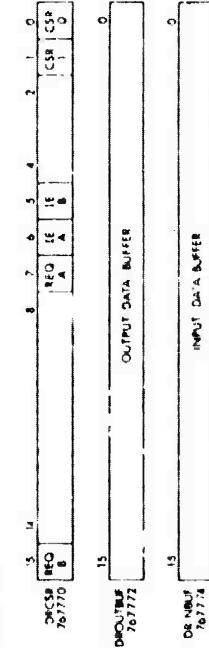

The register addresses can be changed by altering the jumpers on the address selection logic. However, any programs or other software re-

## DR11-C

ferring to these addresses must also be modified accordingly if the jumpers are changed.

### Control and Status Register (DRCSR) 76770

The control and status register is used to enable interrupt logic and to provide user-defined command and status functions for the external device.

Two REQUEST bits, which are under device control, may be used to provide device status indications, or may be used to initiate interrupts when used with associated INT ENB (interrupt enable) bits which are under program control. Two other bits (CSR0 and CSR1) are controlled from the UNIBUS and serve as command bits.

Although the REQUEST and CSR bits can be used for any function the user desires, standard PDP-11 interface conventions attempt to allocate bit 15 for error conditions and bit 7 for ready indications and both of these bits can generate interrupt requests. In addition, bit 0 is normally used for start or go commands.

### DRCSR Bit Assignments

BIT	NAME	FUNCTION
15	REQUEST B	This bit is under control of the user's device and may be used to initiate an interrupt sequence or to generate a flag that may be tested by the program.

When used as an interrupt request, it is set by the external device and initiates an interrupt provided the INT ENB B bit (bit 05) is also set.

When used as a flag, this bit can be read by the program to monitor external device status.

When the maintenance cable is used, the state of this bit is dependent on the state of CSR1 (bit 01). This permits checking interface operation by loading a 0 or 1 into CSR1 and then verifying that REQUEST B is the same value.

Read-only bit. Cleared by INIT when in Maintenance Mode.

BIT	NAME	FUNCTION
07	REQUEST A	(bit 15) except that an interrupt is generated only if INT ENB A (bit 06) is also set.

When the maintenance cable is used, the state of REQUEST A is identical to that of CSRO (bit 04). Read-only bit. Cleared by INIT when in Maintenance Mode.

## DR11-C

06	INT ENB A	Interrupt enable bit. When set, allows an interrupt sequence to be initiated, provided REQUEST A (bit 07) has been set. Can be loaded or read by the program (read/write bit). Cleared by INIT.
C5	INT ENB B	Interrupt enable bit. When set, allows an interrupt sequence to be initiated, provided REQUEST B (bit 15) becomes set. Can be loaded or read by the program (read/write bit). Cleared by INIT.
01	CSR1	This bit can be loaded or read (under program control) from the UNIBUS and can be used for a user-defined command to the device (appears only on Connector No. 1).

When the maintenance cable is used, setting or clearing this bit causes an identical state in bit 15 (REQUEST B). This permits checking operation of bit 15 which cannot be loaded by the program.

Read/write bit (can be loaded or read by the program). Cleared by INIT.

Performs the same functions as CSR1 (bit 01) but appears only on Connector No. 2.

When the maintenance cable is used, the state of this bit controls the state of bit 07 (REQUEST A).

Read/write bit. Cleared by INIT.

### Output Buffer Register (DROUTBUF) 767 772

The output buffer is a 16-bit read/write register that may be read or loaded from the UNIBUS. Information from the bus is loaded into this register under program control. At the time of loading, a pulsed signal (NEW DATA READY) is generated to inform the user's device that the register has been loaded. The trailing edge of the positive pulse should be used to allow the data to be loaded and settle on the user's input lines. Data from the buffer is transmitted to the user's device on the data OUT lines by means of a DATO or DATOB bus cycle.

The contents of the output buffer register may be read at any time by means of a DATI or DATIP bus cycle. During the read operation, the output of the buffer is fed directly to the bus data lines.

Whenever the maintenance cable is used, the data from the output buffer is also applied to the input buffer register. This permits checking operation of the interface logic.

The DROUTBUF is cleared by INIT.

### Input Buffer Register (DRINBUF) 767 774

The input buffer is a 16-bit read-only register that receives data from the user's device for transmission to the UNIBUS. Information to be read is provided by the user's device on the data IN signal lines. Because the input buffer consists of gating logic rather than a flip-flop register, the data IN lines must be held until read onto the bus. The register is read by a DATI sequence and the data is transmitted on the UNIBUS for transfer to the processor or some other device. When the input lines are read during a DATI sequence, a pulsed signal (DATA TRANSMITTED) is sent to the user's device to inform it that the transfer has been completed. The trailing edge of the positive-going pulse indicates that this transfer is completed.

Whenever the maintenance cable is used, the input buffer register receives data from the output buffer register rather than from the user's device. This permits checking of the interface logic by loading a word from the bus into the output register and verifying that the same word appears in the input buffer.

### Input and Output Signals

Signal	Connector	Pin	Signal	Connector	Pin
IN00	2	TT	OUTC1	1	C
IN01	2	LL	OUT01	1	K
IN02	2	H	OUTC2	1	NN
IN03	2	3B	OUT02	1	U
IN04	2	KK	OUT04	1	L
IN05	2	HH	OUT05	1	N
IN06	2	EE	OUT06	1	R
IN07	2	CC	OUT08	1	T
IN08	2	Z	OUT09	1	W
IN09	2	Y	OUT10	1	X
IN10	2	W	OUT16	1	Z
IN11	2	V	OUT11	1	AA
IN12	2	U	CUT12	1	BB
IN13	2	P	OUT13	1	FF
IN14	2	N	OUT14	1	HH
IN15	2	M	OUT15	1	JJ
REQ A	1	LL	NEW DATA RDY	1	VV
REQ B	2	S	DATA TRANS.	2	CC
CSRO	2		CSRI	1	K
CSRI	2		INIT	1	DD
INIT	2			1	P
				2	RR, NN

\* Pulse signals, approximately 400ns wide. A 400ns can be obtained by user.

## DR11-C

### Pin Connections

M971				DR11-C				M971			
Berg Header		Connector No. 2	Connector No. 1	Berg Header		Board		Berg Header		Board	
U2	A	VV	OPEN	A	OPEN			A1	A2		
U1	B	UU	GND	B	OPEN	TT	A1	D	D	OPEN	OPEN
V2	C	TT	IN00	C	OUT00	D	SS	E	F	OPEN	DATA TRANS
V1	D	SS	GND	D	OPEN	E	RR	B1	F	OPEN	IN02
T2	E	RR	INIT H	E	OPEN	F	PP	B2	H	OPEN	OPEN
T1	F	PP	GND	F	OPEN	GND	NN	C1	J	GND	IN02
T2	G	NN	INIT H	H	OPEN	J	NN	C2	K	OUT01	CSRO
T1	H	MM	GND	I	OUT01	K	LL	D1	L	OUT04	GND
S2	I	LL	IN01	L	OUT04	L	KK	D2	M	IN15	IN15
S1	J	KK	IN04	M	GND	M	HH	E1	P	INIT	IN13
R2	K	JJ	GND	N	OUT05	N	FF	F1	R	OUT05	IN14
R1	L	HH	IN05	O	INIT H	P	EE	F2	S	OUT06	GND
P2	M	PP	OPEN	Q	OUT06	R	DD	H1	CC	REQ B	GND
P1	N	EE	IN06	S	GND	T	AA	J1	H2	S	REQ B
N2	O	DD	GND	U	OUT07	U	BB	J2	T	OUT07	GND
N1	P	CC	IN07	V	OUT07	V	Z	K1	U	OUT03	IN12
M2	Q	BB	IN03	W	OUT08	W	Y	K2	V	GND	IN11
M1	R	AA	GND	X	OUT08	X	X	L1	W	OUT08	IN10
L2	S	Z	IN08	Y	OUT09	Y	Z	L2	X	OUT09	GND
L1	T	Y	IN09	Y	OUT09	Z	AA	M1	Y	IN09	IN09
K2	U	X	IN10	Z	OUT10	AA	BB	M2	Z	OUT10	IN08
K1	V	W	IN11	W	OUT10	BB	CC	N1	W	IN10	GND
J2	W	V	IN12	V	OUT11	CC	DD	N2	X	OUT11	IN03
J1	X	U	IN12	U	OUT11	DD	EE	P1	AA	OUT11	OUT12
H2	Y	U	IN12	Y	OUT12	EE	FF	P2	BB	OUT12	OUT13
H1	Z	CC	REQ B	Z	OUT12	FF	HH	N	CC	GND	IR-07
F2	A	AA	GND	AA	OUT13	HH	NN	R1	DD	CSR1	GND
F1	B	BB	GND	BB	OUT14	NN	JJ	R2	EE	GND	IN06
E2	C	BB	GND	BB	OUT15	JJ	KK	S1	FF	CUT13	OPEN
E1	D	CC	GND	CC	OUT15	KK	LL	S2	EE	GND	IN05
D2	E	CC	GND	CC	OUT15	LL	RR	T1	FF	OUT14	GND
D1	F	DD	GND	DD	OUT15	RR	SS	V1	HH	OUT15	IN05
C2	G	DD	GND	DD	OUT15	SS	TT	V2	JJ	OUT15	GND
C1	H	DD	GND	DD	OUT15	TT	C	B1	KK	REQ A	IN04
B2	I	DD	GND	DD	OUT15	C	TRANS.	B2	LL	REQ A	IN01
B1	J	DD	GND	DD	OUT15	TRANS.	TRANS.	B1	MM	GND	GND
A2	K	DD	GND	DD	OUT15	TRANS.	TRANS.	A1	NN	CUT02	INIT
A1	L	DD	GND	DD	OUT15	TRANS.	TRANS.	A	UU	MM	MM
	M	DD	GND	DD	OUT15	TRANS.	TRANS.		VV	NN	NN

## DR11-C

### BC11K Connections

Twisted Pair				Color				Pin				Connector No. 1		Connector No. 2	
black/white-orange	black	wh-org	black	black/white-yellow	black	wh-yel	black	A	B	C	D	OPEN	OPEN	OPEN	OPEN
black/white-grey	black	wh-gr	black	black/white:red	black	wh-red	black	E	F	G	H	OPEN	OPEN	DATA TRANS	DATA TRANS
black/white:green	black	wh-grn	black	black/white:blue	black	wh-blu	black	K	L	M	N	OUT05	OUT06	OUT05	OUT06
brown/green	brown	green	brown	brown/red	brown	red	brown	P	R	S	T	INIT	REQ B	INIT	REQ B
brown/green	brown	green	brown	black/white:blue	black	blue	brown	U	V	W	X	OUT08	OUT09	OUT08	OUT09
brown/red	brown	red	brown	black/orange	black	orange	brown	Y	Z	AA	BB	OUT03	OUT04	OUT03	OUT04
brown/violet	brown	violet	brown	black/white-violet	black	white-vio	brown	W	X	AA	BB	OUT08	OUT09	OUT08	OUT09
brown/blue	brown	blue	brown	black/red	black	red	brown	Y	Z	CC	DD	IN10	IN11	IN10	IN11
brown/yellow	brown	yellow	brown	black/blue	black	blue	brown	AA	BB	EE	FF	OUT11	OUT12	OUT11	OUT12
brown/yellow	brown	yellow	brown	black/blue	black	blue	brown	BB	CC	GG	HH	OUT12	OUT13	OUT12	OUT13
brown/orange	brown	orange	brown	black/blue	black	blue	brown	EE	FF	EE	FF	OUT13	OUT14	OUT13	OUT14
brown/blue	brown	blue	brown	black/blue	black	blue	brown	HH	JJ	GG	HH	OUT14	OUT15	OUT14	OUT15
black/yellow	black	yellow	black	black/yellow	black	yellow	brown	KK	LL	EE	FF	REQ A	REQ A	REQ A	REQ A
brown/violet	brown	violet	brown	brown/violet	brown	violet	brown	LL	MM	GG	HH	OUT15	OUT16	OUT15	OUT16

DR11.C

Parts List for Interface

Reference Number in Circuit	I.C. Number	Price *
1	SN7404	.70
2	SN7400	.55
3	SN7402	.55
4	SN7402	.55
5	SN7474	.68
6	SN74123	2.40
7	SN74123	2.40
8	SN74193	3.30
9	SN74164	6.55
10	DM8820	3.69
11	DM8820	3.69
12	DM8830	3.09
13	DM8830	3.09
14	SN74193	3.30
15	SN74152	7.80
16	SN7402	.55
17	SN7400	.55
18	Magnecraft W107-DIP-1 Relay	4.00

Connectors

J1	DEC H-856	8.00
J2	DEC H-356	0.60
IMP Conn. Amphenol 48-10R-18-31S		62.00

Resistors 11 1/4 Watt 5%, \$.06 ea.)

1	39 ohm	.06
8	100 ohm	.48
1	120 ohm	.56
16	180 ohm	.90
3	1K ohm	.18
1	3.3K ohm	.06
1	10K ohm	.06
4	22K ohm	.24

Capacitors

1	.002 mfd mylar	.30	
4	100 pf mica	1.00	
18	.01 mfd. ceramic	.13 ea	2.34
1	5 mfd tantalum	.40	
1	10 mfd tantalum	.52	

Diodes

2	3.6V .5 Watt zeners	1N52278	.80 ea.	1.60
19		1N4148	.25 ea.	4.75

Circuit Board

Douglass Electronics 11-DE-11

24.75

Total

\$ 162.26

(excludes labor, connecting wire, solder, etc.)

\* 1976 Catalog prices

ARPA DISTRIBUTION

ARPA

Director (2 copies)  
ATTN: Program Management  
Advanced Research Projects Agency  
1400 Wilson Boulevard  
Arlington, VA 22209

Defense Documentation Center (DDC)  
(12 copies)  
Cameron Station  
Alexandria, VA 22314

ARPA/IPT  
1400 Wilson Boulevard  
Arlington, VA 22209

Dr. Robert Kahn  
Mr. Steven Walker

Bolt Beranek and Newman Inc.  
50 Moulton Street  
Cambridge, MA 02138

Mr. Jerry D. Burchfiel  
Mr. R. Clements  
Mr. A. McKenzie  
Mr. J. McQuillan  
Mr. R. Tomlinson  
Mr. D. Walden

Cabledata Associates

Mr. Paul Baran  
Cabledata Associates, Inc.  
701 Welch Road  
Palo Alto, CA 94304

California, University - Irvine

Prof. David J. Farber  
Department of Information and  
Computer Science  
University of California  
Irvine, CA 92717

California, University - Los Angeles

Professor Gerald Estrin  
Computer Sciences Department  
School of Engineering and Applied Science  
University of California  
Los Angeles, CA 90024

Professor Leonard Kleinrock  
Computer Sciences Department  
3732 Boelter Hall  
University of California  
Los Angeles, CA 90024

Mr. William Naylor  
3804-D Boelter Hall  
University of California  
Los Angeles, CA 90024

Collins Radio Group  
1200 N. Alma Road  
Richardson, Texas 75080

Mr. Don Heaton  
Mr. Frederic Weigl

Defense Communications Engineering Center

Dr. Harry Helm  
DCEC, R-520  
1860 Wiehle Avenue  
Reston, VA 22090

Hawaii, University of

Professor Norman Abramson  
The ALOHA System  
2540 Dole Street, Holmes 486  
University of Hawaii  
Honolulu, Hawaii 96822

Illinois, University of

Mr. John D. Day  
University of Illinois  
Center for Advanced Computation  
114 Advanced Computation Building  
Urbana, Illinois 61801

Institut de Recherches d'Informatique et d'Automatique (IRIA)  
Reseau Cyclades  
78150 Rocquencourt  
France

Mr. Louis Pouzin  
Mr. Hubert Zimmerman

Information Sciences Institute  
University of Southern California  
4676 Admiralty Way  
Marina del Rey, CA 90291

Mr. Steven D. Crocker  
Mr. Keith Uncapher

London, University College

Prof. Peter Kirstein  
University College London  
Department of Statistics &  
Computer Science  
43 Gordon Square  
London WC1H 0PD, England

Massachusetts Institute of Technology

Dr. J. C. R. Licklider  
MIT  
Project MAC - PTD  
545 Technology Square  
Cambridge, MA 02139

Mitre Corporation

Mr. Michael A. Padlipsky  
MITRE Corporation  
P. O. Box 208  
Bedford, MA 01730

Network Analysis Corporation  
Beechwood, Old Tappan Road  
Glen Cove, New York 11542

Mr. Wushow Chou  
Mr. Howard Frank

National Bureau of Standards  
Mr. Robert P. Blanc  
National Bureau of Standards  
Institute for Computer Sciences  
and Technology  
Washington, D. C. 20234

Mr. Ira W. Cotton  
National Bureau of Standards  
Building 225, Room B215  
Washington, D. C. 20234

National Physical Laboratory  
Computer Science Division  
Teddington, Middlesex, England TW11 OLW

Mr. Derek Barber  
Dr. Donald Davies  
Mr. Roger Scantlebury  
Mr. P. Wilkinson

National Security Agency  
9800 Savage Road  
Ft. Meade, MD 20755

Mr. Dan Edwards  
Mr. Ray McFarland

Norwegian Defense Research Establishment  
P. O. Box 25  
2007 Kjeller, Norway

Mr. Yngvar G. Lundh  
Mr. P. Spilling

Oslo, University of

Prof. Dag Belsnes  
EDB-Sentret  
University of Oslo  
Postbox 1059  
Blindern, Oslo 3, Norway

Rand Corporation  
1700 Main Street  
Santa Monica, CA 90406

Mr. S. Gaines  
Dr. Carl Sunshine

Rennes, University of

M. Gerard LeLann  
Reseau CYCLADES  
U.E.R. d'Informatique  
B. P. 25A  
35031-Rennes-Cedex, France

Stanford Research Institute  
333 Ravenswood Avenue  
Menlo Park, CA 94025

Ms. E. J. Feinler  
Augmentation Research Center

Dr. Jon Postel (4 copies)  
Augmentation Research Center

Mr. D. Nielson, Director  
Telecommunication Sciences Center

Dr. David Retz  
Telecommunication Sciences Center

System Development Corporation

Dr. G. D. Cole  
System Development Corporation  
2500 Colorado Avenue  
Santa Monica, CA 90406

Telenet Communications, Inc.  
1666 K Street, N. W.  
Washington, D. C. 20006

Dr. Holger Opderbeck  
Dr. Lawrence G. Roberts  
Dr. Barry Wessler

Defense Communication Agency

Dr. Franklin Kuo  
4819 Reservoir Drive  
Washington, D. C. 20007

Xerxes Palo Alto Research Center  
3333 Coyote Hill Road  
Palo Alto, CA 94304

Mr. David Boggs  
Dr. R. Metcalfe  
Mr. John Shoch  
Dr. William R. Sutherland

Stanford University

Mr. Ronald Crane, Digital Systems Laboratory  
Mr. Yogen Dalal " " "  
Ms. Judith Estrin " " "  
Prof. Michael Flynn " " "  
Mr. Richard Karp " " "  
Dr. John Linvill, Electrical Engineering  
Mr. James Mathis, Digital Systems Laboratory  
Mr. Darryl Rubin " " "  
Mr. Wayne Warren " " "

COMPUTER FORUM MAILING LIST - 1976

BELL LABORATORIES

Dr. Elliot N. Pinson, Head  
Computer Systems Research Department  
Bell Laboratories  
600 Mountain Avenue  
Murray Hill, New Jersey 07974

Dr. Mark Rochkind  
Bell Laboratories  
600 Mountain Avenue  
Murray Hill, New Jersey 07974

Mr. Kenneth L. Thompson  
1103 High Court  
Berkeley, California 94708

B N R, Inc.

Mr. Alex Curran, President  
B N R, Inc.  
3174 Porter Drive  
Palo Alto, California 94304

Mr. Barry Gordon  
B N R, Inc.  
3174 Porter Drive  
Palo Alto, California 94304

Mr. Alan Chapman  
B N R, Inc.  
3174 Porter Drive  
Palo Alto, California 94304

BURROUGHS CORPORATION

Dr. Wayne T. Wilner  
Burroughs Corporation  
3978 Sorrento Valley Boulevard  
San Diego, California 92121

Mr. John Mazola  
Burroughs Corporation  
25725 Jeronimo Road  
Mission Viejo, California 92675

Mr. Louis de Bartolo  
Burroughs Corporation  
1671 Reynolds  
Irvine, California 92714

GENERAL ELECTRIC COMPANY

Dr. Richard L. Shuey  
General Lectric Research and  
Development Center  
P.O. Box 8  
Schenectady, New York 12301

Mr. J. T. Duane, Manager  
Special Purpose Computing Center  
General Electric Company  
1285 Boston Avenue  
Bridgeport, Connecticut 06602

Mr. Ronald S. Taylor  
General Electric Company  
175 Curtner Avenue  
San Jose, California 95125

GENERAL MOTORS CORPORATION

Dr. George C. Dodd, Assistant Head  
Computer Science Department  
General Motors Research Laboratories  
General Motors Technical Center  
Warren, Michigan 48090

Dr. Joseph T. Olsztyń  
Computer Science Department  
General Motors Research Laboratories  
General Motors Technical Center  
Warren, Michigan 48090

Dr. James Thomas  
Computer Science Department  
General Motors Research Laboratories  
General Motors Technical Center  
Warren, Michigan 48090

HEWLETT-PACKARD

Mr. Don Senzig  
Hewlett-Packard Laboratories  
Building 18  
1501 Page Mill Road  
Palo Alto, California 94304

Dr. J. R. Duley  
HPL/ERL  
3500 Deer Creek Road  
Palo Alto, California 94304

COMPUTER FORUM MAILING LIST - 1976

(continued)

HEWLETT-PACKARD (continued)

Mr. Stephen Walther  
HPL/ERL  
3500 Deer Creek Road  
Palo Alto, California 94304

HUGHES AIRCRAFT COMPANY

Mr. R. Eugene Allen  
Hughes Aircraft Company  
Bldg. 604, M.S. D-222  
P.O. Box 3310  
Fullerton, California 92634

Mr. Thomas J. Burns  
Hughes Aircraft Company  
Bldg. 390, M.S. 2007  
P.O. Box 92919  
Los Angeles, California 90009

Hughes Aircraft Company  
Attn: B. W. Campbell 6/E110  
Company Technical Documents Center  
Centinela and Teale Streets  
Culver City, California 90230

IBM

Dr. Leonard Y. Liu, Manager  
Computer Science  
International Business Machines Corporation  
K51-282, 5600 Cottle Road  
San Jose, California 95193

Mr. Harry Reinstein  
International Business Machines Corporation  
1501 California Avenue  
Palo Alto, California 94303

Dr. Donald Frazer  
IBM Watson Research Center  
P.O. Box 218  
Yorktown Heights, New York 10598

MICROTECHNOLOGY CORPORATION

Mr. Fred Buelow  
Microtechnology Corporation  
224 N. Wolfe Road  
Sunnyvale, California 94086

Mr. Naoya Ukai  
Microtechnology Corporation  
224 N. Wolfe Road  
Sunnyvale, California 94086

Mr. John J. Zasio  
Microtechnology Corporation  
224 N. Wolfe Road  
Sunnyvale, California 94086

SIEMENS AG

Mr. Dr. Jan Witt  
Siemens AG  
Zentrale Forschung und Entwicklung  
FL SAR  
Hofmannstr. 51  
8000 München 70, Germany

Mr. Harold Fritzsche  
Siemens AG  
Zentrale Fertigungsaufgaben  
FTE 3 Aut 2  
Schertlinstr. 8  
8000 München 70, Germany

Mr. Volker Haberland  
Siemens AG  
Zentrale Fertigungsaufgaben  
FTE 3 Aut 23  
Schertlinstr. 8  
8000 München 70, Germany

XEROX CORPORATION

Dr. Jerome Elkind, Manager  
Computer Science Laboratory  
Xerox Corporation  
Palo Alto Research Center  
3180 Porter Drive  
Palo Alto, California 94303

COMPUTER FORUM MAILING LIST - 1976

(continued)

XEROX CORPORATION (continued)

Mr. Robert Taylor, Principal Scientist  
Computer Science Laboratory  
Xerox Corporation  
Palo Alto Research Center  
3180 Porter Drive  
Palo Alto, California 94303

Dr. Butler Lampson  
Xerox Corporation  
Palo Alto Research Center  
3180 Porter Drive  
Palo Alto, California 94303

STANFORD UNIVERSITY

Professor Edward J. McCluskey (2)  
Director, Digital Systems Laboratory

Computer Science Department

Computer Science Library (2)

Digital Systems Laboratory Library (5)

Engineering Library (2)

IEEE Computer Society Repository (2)